


# **FDOMES MODULES**

BATHROOM – ASSEMBLY GUIDE

## STEP 1

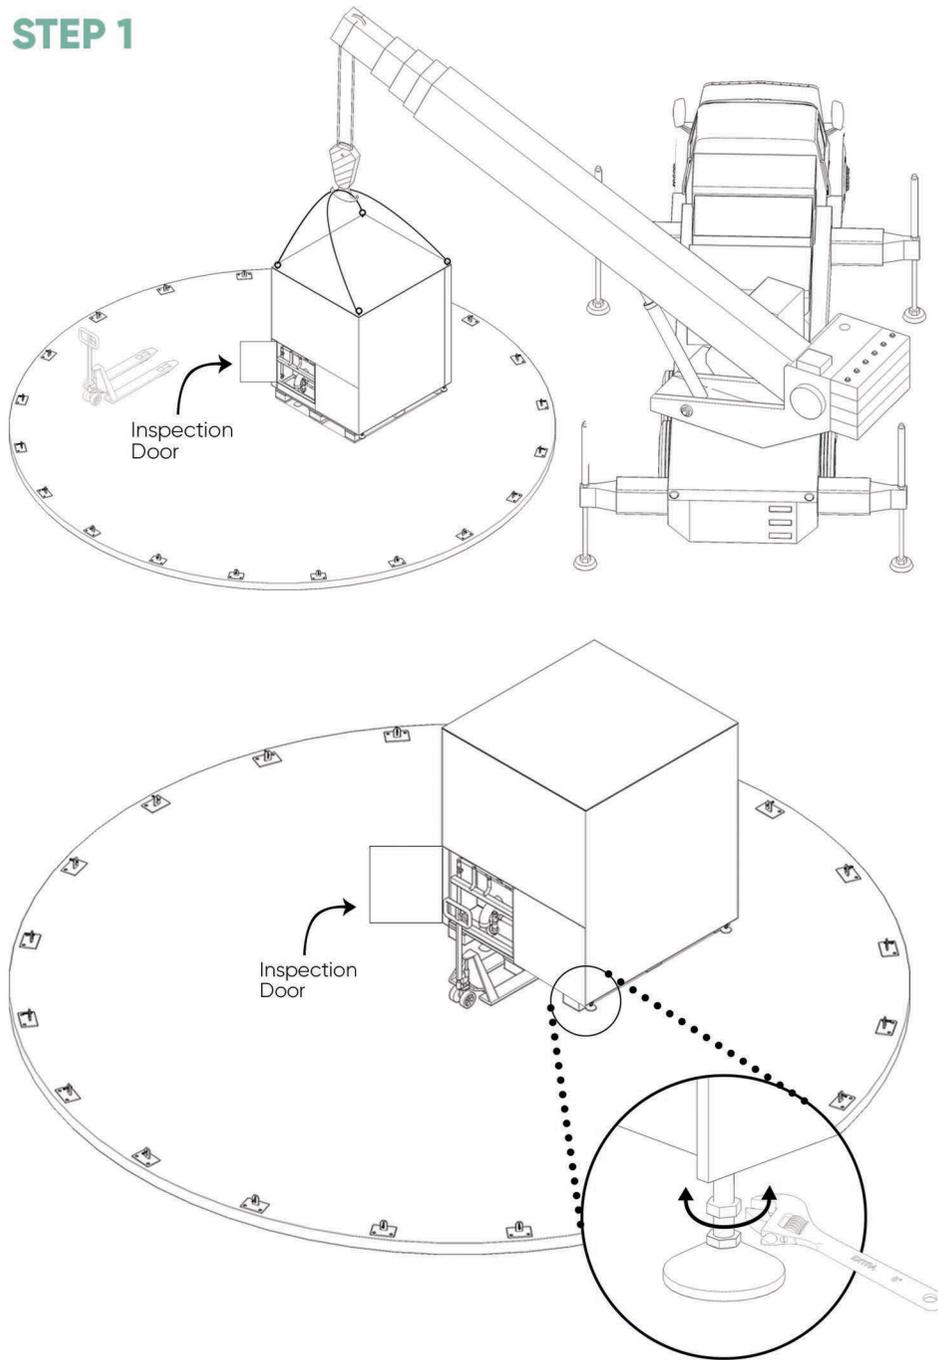

## CRANE - ASSEMBLY GUIDE

- Attach a crane hook using the bolts and eyenuts provided on the top of the bathroom module.
- Put down the module on the deck, within the dome perimeter.
- Open the inspection door at the back of the module.
- Navigate a crane and adjust the location of the module so that the sewage pipe is under the sewage outlet in the module.
- Adjust the module using height adjustment bolts in each corner of the module.
- Remove the pallet from underneath the module.
- Lower the module using the height adjustment bolts as low as possible and level it.



### **WARNING:**

This product must be installed and serviced by professional service technicians. Even though we do our best to provide a product compliant with regulations of each country, it is still possible that some specific installation requirements must be adjusted by local professional technicians.

## PALLET TRUCK - ASSEMBLY GUIDE

(with a minimum 2-meter forks):


- Adjust the module using height adjustment bolts in each corner of the module
- Remove the pallet from underneath the module.
- Open the inspection door at the back of the module.
- Drive a pallet truck under the module and adjust the location of the module so that the sewage pipe is under the sewage outlet in the module.
- Adjust the module using height adjustment bolts in each corner of the module
- Lower the module using the height adjustment bolts as low as possible and level it.

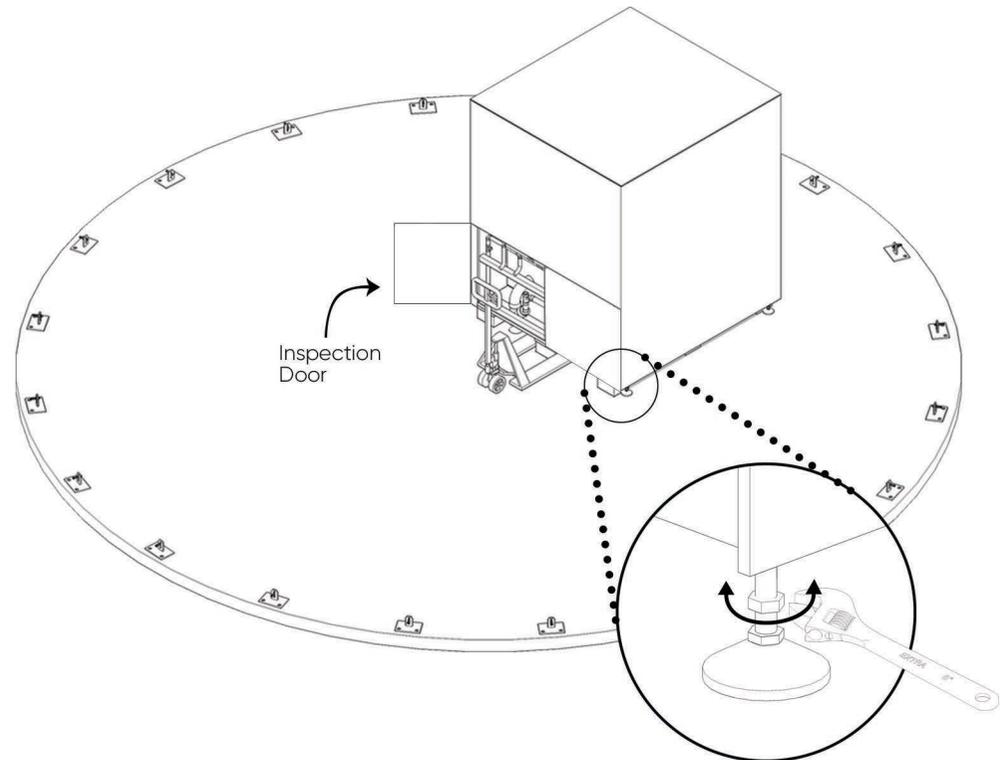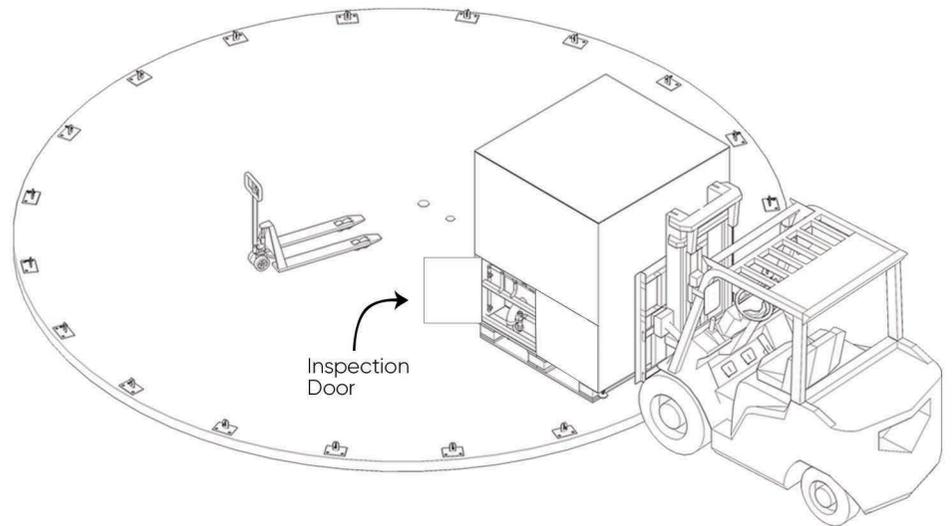


### WARNING:

This product must be installed and serviced by professional service technicians. Even though we do our best to provide a product compliant with regulations of each country, it is still possible that some specific installation requirements must be adjusted by local professional technicians.

## STEP 2 TOP VIEW

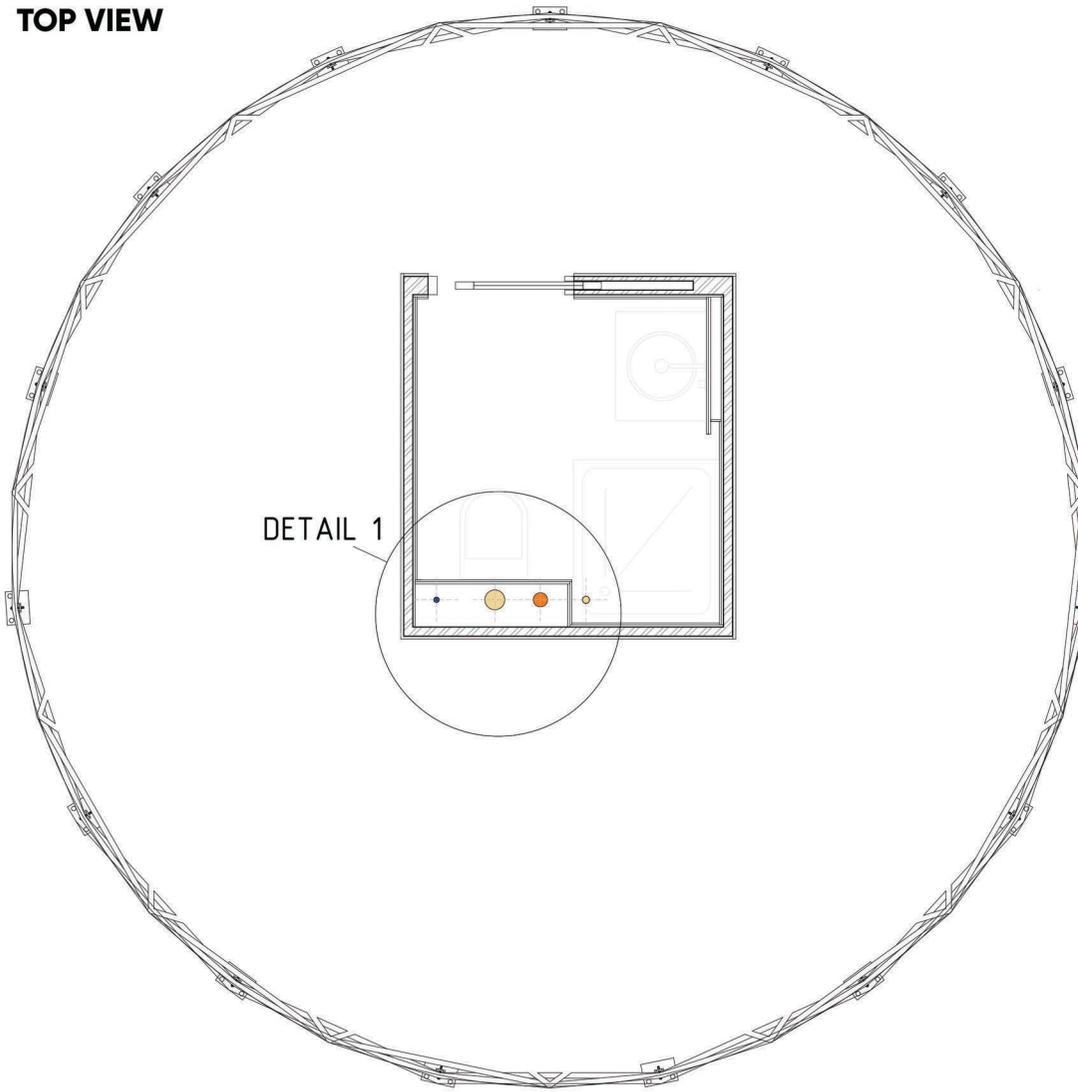

## DETAIL 1

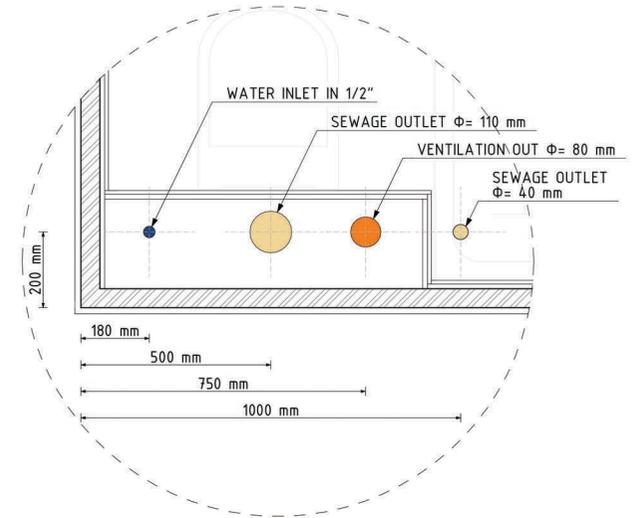

## IMPORTANT

Under no circumstances will compliance with the information in this manual relieve the users of their responsibility to comply with all applicable codes or safety standards. This document describes the most commonly used installation and mounting scenarios. If situations arise in which it is not possible to perform an installation following the procedures provided in this document, contact FDomes.

**FDomes is not responsible for any damages that may occur resulting from custom installations that are not described in this document or for any failure to adhere to installation recommendations.**

## STEP 3

### CONNECT ALL THE PIPES:

- Sewage outlet pipes to sewage pipe/pipes (depending on your connection under the dome).
- Water to water inlet.
- The Power Cable behind the module is dedicated for lighting in the module (110V-240V).
- Make sure that hot and cold water outlet valves for kitchen module are closed.

#### WARNING:

The water heater is not connected by default. Please contact your local authorized professional in order to connect it for you.

#### WARNING:

This product must be installed and serviced by professional service technicians. Even though we do our best to provide a product compliant with regulations of each country, it is still possible that some specific installation requirements must be adjusted by local professional technicians.

#### IMPORTANT:

Under no circumstances will compliance with the information in this manual relieve the users of their responsibility to comply with all applicable codes or safety standards. This document describes the most commonly used installation and mounting scenarios. If situations arise in which it is not possible to perform an installation following the procedures provided in this document, contact FDomes.

**FDomes is not responsible for any damages that may occur resulting from custom installations that are not described in this document or for any failure to adhere to installation recommendations.**

## BATHROOM ASSEMBLY SCHEME

